

INSTALLATION INSTRUCTIONS FOR CRYSTAL KNOB FURNITURE

-IT IS IMPORTANT THAT YOU READ THESE INSTRUCTIONS BEFORE STARTING THE INSTALLATIONS OF THESE KNOBS



STEP 1

Unscrew the grub screw from the knob with allen key provided. Then remove the knob from its rose(base)




STEP 2

Dismantle the rose by unscrewing the cover plate.



STEP 3

Make sure that the hole for the spindle is of sufficient diameter to allow the rose assembly to sit flat on the surface of the door. Insert the spindle through the lock or latch and then fix the rose assembly to each side of the door using either wood screws or 'thru fixing' screws.

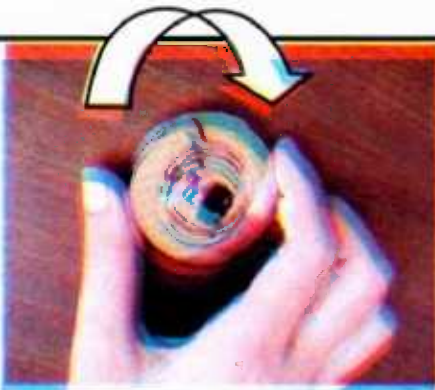

STEP 4

Screw the rose cover to the base assembly.



STEP 5

Put the knob on the base and make sure the grub screw holes on rose & knob are in the same position.



STEP 6

Insert the grub screw into each knob and tighten on the rose assembly with the allen key provided.

Cleaning instructions

- For glass/crystal just wipe over with a damp cloth to keep clean.
- Brass roses need dusting with a soft cloth washing with warm water and application of good wax polish, once a month is all that is needed.
- For satin and polished chrome rose just wipe over with a damp cloth.