

TEMPLATE

1 FOLD HERE ON DOOR EDGE

CAUTION

Check backset required for lock before drilling 50mm hole.


70mm BACKSET
60mm BACKSET

CENTRE LINE

2 Mark centre of 45mm thick door for 25mm hole

Mark centre of 35mm thick door for 25mm hole

5 Drill 25mm hole in centre of door edge for latch



BACKSET: is length from edge of door to centre of 50mm hole.


3 Mark for centre of 50mm hole on door face for 60mm backset

OR
For 70mm Backset

4 Drill 50mm hole


Recommended centre line is 914mm from floor.

Instructions for Installing Door Set

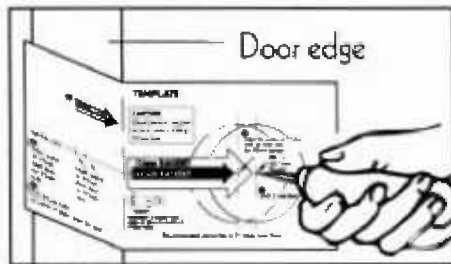


A Mark Door

Mark centre of door edge and centre hole on door face using the enclosed template. Using the centre line on the template mark the frame. From this mark measure into the centre of the frame and mark.

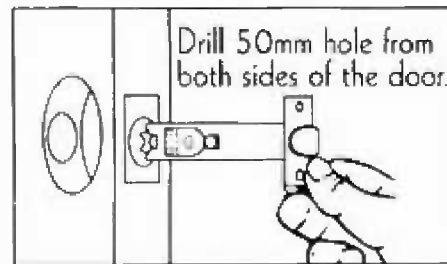


B Drill Two Holes

Drill a 50mm hole through the door face as marked and a 25mm hole in the door edge long enough to reach through to the 50mm hole already drilled. Insert the latch into the door and mark around the forend. Recess to a depth of 2mm to allow latch to fit flush against the door. Fit latch using the screws provided.

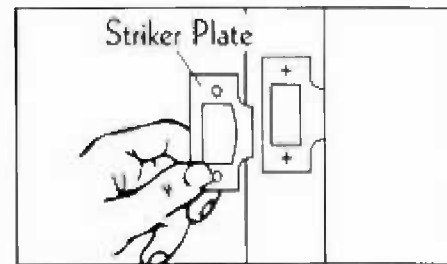


C Install Striker

Drill a 25mm hole in the frame where previously marked. Screw striker plate over this hole using the screws provided. (Recess if necessary).

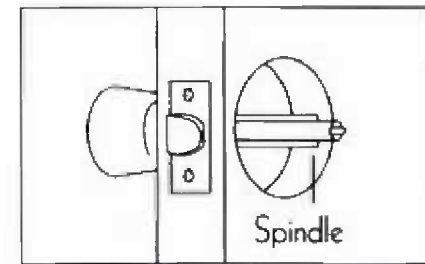


D Install External Knob

Insert external handle into the latch ensuring the spindle and stems position correctly into the latch. Press flush against the door.

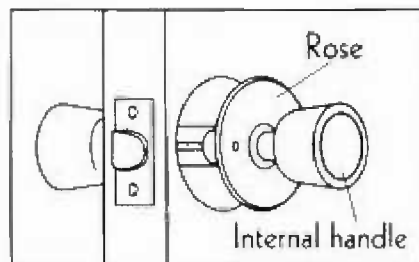

E Install Internal Assembly

Insert internal handle over the spindle ensuring the fixing holes on rose are horizontal. Use bolts provided to fasten handles together.

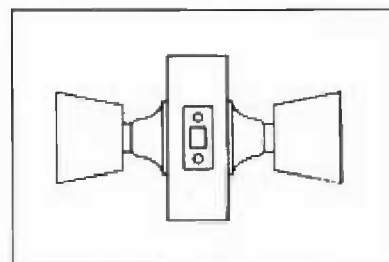

F Opening test

Check operation of lock set by turning both internal and external handle.

To fit the door set you will require the following:

Power drill
50mm and 25mm drill bits
Hammer
Chisel
Posidriv Screwdriver
Bradawl

Contents

2 x knobs, latch, striker plate & fixings.